

## Zinger Chair Swinging Foot Plate Cable Replacement Instructions

If you have any questions please call us at  
800-958-8324

1. Using the hex key provided, hold screw A stationary. Using either an 8mm wrench or a pliers, unthread the nut one turn.
2. Now hold the nut stationary while unthreading the screw completely, until it is removed. Do the same to screw B.
3. Now screw the cable eye into the foot plate at location A. Once screwed all the way in, back the screw off one turn so that the cable eye is free to move.
4. Holding the screw A stationary, thread the nut on the back and tighten.
5. Check to be sure the cable eye swivels freely. If not loosen the nut a little, back the screw out a little, and retighten the nut.
6. Do the same to screw B as shown. Note that the cable eye goes under the screw head, not under the nut.

**NOTE:** Do not lift up on the Swinging Foot Plate, this will likely break the cable.  
**Also** do not let the foot plate swing around past 12 o'clock (vertical) in either direction. (Red Arrows) This too may break the cable.

